



POLICE DEPARTMENT
 LAKE HAVASU CITY
 2360 McCULLOCH BOULEVARD NORTH
 LAKE HAVASU CITY, ARIZONA 86403-5947

To Whom It May Concern:

I hereby attest that Josh Sondrol is a Certified Intoxilyzer Quality Assurance Specialist for the Lake Havasu City Police Department.

I certify that the attached documentation of Standard Quality Assurance Procedures and/or Standard Calibration Check Procedure are full, true and correct copy of the original.

[Handwritten Signature]
 Signature

STATE OF ARIZONA)
) ss
 COUNTY OF MOHAVE)


Subscribed and sworn to before me this 18 day of MARCH.

2019 by JOSH SONDROL

[Handwritten Signature]
 NOTARY PUBLIC

3-18-19
 DATE

Commission expires: 3-29-2021

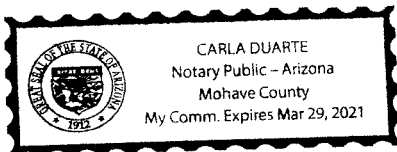

Area Code 928

Administration 855-4884
 Business Office 855-1171
 Investigations 855-5775
 Patrol 855-0515

Fax #'s
 Administration 680-5430
 Business Office 680-5431
 Investigations/Patrol 680-5432

Emergency 9-1-1
 Non-Emergency Dispatch/ 855-4111
 Havasu Silent Witness 854-TIPS

E-mail: police@lhcaz.gov

Exhibit G-2. Standard Calibration Check Procedure, Intoxilyzer Model 8000

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104(A)
ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J SONDRAAL 187 AGENCY LNC PD
DATE 3/15/19 TIME 0639
INTOXILYZER SERIAL # 80-001873 LOCATION CNR MODEL STATION 8

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34° C ± 0.2° C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 099 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE J Sondraal 187

DPS Form Exh G-2 (Rev 05-01)

Historical Note
New Exhibit G-2 made by final rulemaking at 12 A.A.R. 1916, effective 9:00 a.m., May 18, 2006 (Supp. 06-2).

187

INTOXILYZER 8000

Location: CHANNEL SIGN 8

Serial Number: 80-001873

Core Version: 8105.48

03/15/2019

06:39:44

Standard Lot#: 13917100A1

Last Changed By: J. SONDRÖL #187

QAS: J. SONDRÖL #187

LAKE HAVASU CITY PD

Operator: J. SONDRÖL #187

LAKE HAVASU CITY PD

Test	g/210L	Time
Air Blank	0.000	06:40:13
0.100 Cal Check	0.099	06:40:34
Air Blank	0.000	06:41:04

Preventative Maintenance
Performed -- Timer Reset

Exhibit G-4. Standard Quality Assurance Procedure Intoxilyzer, Model 8000

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES

INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST J Sondreal 187 AGENCY LNC PD

DATE 3/15/17 TIME 0648

INTOXILYZER SERIAL # 80-001873 LOCATION CORONADO SIGN 8

(1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

(1. Clock time check.

(2. Date check.

OPERATIONAL TESTS

(1. Alcohol-free subject test result 0. 000 AC.

(2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed

(3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.

(4. Standard Calibration Check standard 0. 100 AC. Result 0. 099 AC.

Instrument is operating properly and accurately. YES NO

COMMENTS _____

SIGNATURE J Sondreal 187

DPS Form Exh G-4 (Rev 05-01)

Historical Note

New Exhibit G-4 made by final rulemaking at 12 A.A.R. 1916, effective 9:00 a.m., May 18, 2006 (Supp. 06-2).

4187

INTOXILYZER 8000
Location: CHANNEL SIGN 8
Serial Number: 80-001873
Core Version: 8105.48
03/15/2019

06:48:08

Standard Lot#: 13917100A1
Last Changed By: J. SONDROL #187

QAS: J. SONDROL #187
LAKE HAVASU CITY PD

Operator: J. SONDROL #187
LAKE HAVASU CITY PD

Subject: SQAP,TEST
DOB: 10/10/1979
Sex: M Weight: 123

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	06:49:20
Diagnostic Test	Pass	06:49:55
Air Blank	0.000	06:50:22
0.100 Cal Check	0.098	06:50:43
Air Blank	0.000	06:51:13
Subject Test	0.000	06:51:37
Air Blank	ABT*	06:51:44
Air Blank	IPS**	06:51:51

*Sequence Aborted
**Improper Sample

Not a Successfully Completed Test Sequence

8187

INTOXILYZER 8000
Location: CHANNEL SIGN 8
Serial Number: 80-001873
Core Version: 8105.48
03/15/2019

06:52:36

Standard Lot#: 13917100A1
Last Changed By: J. SONDRON #187

QAS: J. SONDRON #187
LAKE HAVASU CITY PD

Operator: J. SONDRON #187
LAKE HAVASU CITY PD

Subject: SQAP,TEST
DOB: 10/10/1979
Sex: M Weight: 123

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	06:53:25
Diagnostic Test	Pass	06:54:00
Air Blank	0.000	06:54:27
0.100 Cal Check	0.099	06:54:48
Air Blank	0.000	06:55:18
Subject Test	0.136*	06:58:25
Air Blank	0.000	06:58:58
Air Blank	0.000	06:59:25
Subject Test	XXX**	06:59:56
Air Blank	RFI***	07:00:03

*Deficient Sample
**Invalid Sample
 Begin new deprivation period
***RFI Detect

Not a Successfully Completed Test Sequence

Exhibit G-2. Standard Calibration Check Procedure, Intoxilyzer Model 8000

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104(A)
ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J SANDRA 187 AGENCY LNC PD
 DATE 3/15/19 TIME 0701
 INTOXILYZER SERIAL # 80-001873 LOCATION CHARLOTTE ST 8

() 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
 OR

Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34° C ± 0.2° C

- () 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
 () 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
 () 4. Air blank completed.
 () 5. Calibration check completed. Test results 0. 098 AC.
 () 6. Air blank completed.
 () 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE J Sandra 187

DPS Form Exh G-2 (Rev 05-01)

Historical Note

New Exhibit G-2 made by final rulemaking at 12 A.A.R. 1916, effective 9:00 a.m., May 18, 2006 (Supp. 06-2).

8/18

INTOXILYZER 8000
Location: CHANNEL SIGN 8
Serial Number: 80-001873
Core Version: 8105.48
03/15/2019 07:01:04

Standard Lot#: 13917100A1
Last Changed By: J. SONDROL #187

QAS: J. SONDROL #187
LAKE HAVASU CITY PD

Operator: J. SONDROL #187
LAKE HAVASU CITY PD

Test	g/210L	Time
Air Blank	0.000	07:01:33
0.100 Cal Check	0.098	07:01:54
Air Blank	0.000	07:02:24

Preventative Maintenance
Performed -- Timer Reset