



POLICE DEPARTMENT  
**LAKE HAVASU CITY**  
 2360 McCULLOCH BOULEVARD NORTH  
 LAKE HAVASU CITY, ARIZONA 86403-5947

To Whom It May Concern:

I hereby attest that Michael T. Maloy, Jr. is a Certified Intoxilyzer Quality Assurance Specialist for the Lake Havasu City Police Department.

I certify that the attached documentation of Standard Quality Assurance Procedures and/or Standard Calibration Check Procedure are full, true and correct copy of the original.

Michael Maloy Jr #281  
 Signature

STATE OF ARIZONA )  
 ) ss  
 COUNTY OF MOHAVE )


Subscribed and sworn to before me this 23rd day of DEC

2021 by MICHAEL MALOY

Shawna Mcknight  
 NOTARY PUBLIC

DEC 23rd 2021  
 DATE

Commission expires:  
MAY 4, 2025

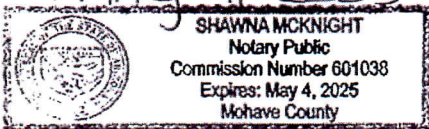

Area Code 928

- |                                |                                      |  |
|--------------------------------|--------------------------------------|--|
| Administration ..... 855-4884  | Fax #'s                              | Emergency ..... 9-1-1                  |
| Business Office ..... 855-1171 | Administration ..... 680-5430        | Non-Emergency Dispatch/ ..... 855-4111 |
| Investigations ..... 855-5775  | Business Office ..... 680-5431       | Havasu Silent Witness ..... 854-TIPS   |
| Patrol ..... 855-0515          | Investigations/Patrol ..... 680-5432 |  |

E-mail: police@lhcaz.gov

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. MALDY #281 AGENCY LHCPS

DATE 12-23-2021 TIME 1749

INTOXILYZER SERIAL # 80-00355 LOCATION LHCPS JAIL

- (  ) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0.100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (  ) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (  ) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (  ) 4. Air blank completed.
- (  ) 5. Calibration check completed. Test results 0.100 AC.
- (  ) 6. Air blank completed.
- (  ) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Michael Maldy #281

INTOXILYZER 8000

Location: JAIL

Serial Number: 80-003355

Core Version: 8105.48

12/23/2021

17:49:26

-----  
Standard Lot#: 35019100A1

Last Changed By: M. MALOY JR #281  
-----

QAS: M. MALOY JR #281

LAKE HAVASU CITY PD  
-----

Operator: M. MALOY JR #281

LAKE HAVASU CITY PD  
-----

Test	g/210L	Time
Air Blank	0.000	17:49:56
0.100 Cal Check	0.100	17:50:17
Air Blank	0.000	17:50:47

Preventative Maintenance  
Performed -- Timer Reset

EXHIBIT G-4  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST M. MALDY #281 AGENCY LHCPD  
DATE 12-23-2021 TIME 1752  
INTOXILYZER SERIAL # 80-003355 LOCATION LHCPD JAIL

(  ) 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (  ) 1. Clock time check.
- (  ) 2. Date check.

OPERATIONAL TESTS

- (  ) 1. Alcohol-free subject test result 0. 000 AC.
- (  ) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed
- (  ) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.
- (  ) 4. Standard Calibration Check standard 0. 100 AC. Result 0. 098 AC.

Instrument is operating properly and accurately. YES  NO

COMMENTS

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

SIGNATURE Michael Malby #281

INTOXILYZER 8000

Location: JAIL

Serial Number: 80-003355

Core Version: 8105.48

12/23/2021

17:52:37

Standard Lot#: 35019100A1

Last Changed By: M. MALOY JR #281

QAS: M. MALOY JR #281

LAKE HAVASU CITY PD

Operator: M. MALOY JR #281

LAKE HAVASU CITY PD

Subject: SQAP,TEST

DOB: 01/01/2000

Sex: M

Weight: 200

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	17:53:24
Diagnostic Test	Pass	17:53:59
Air Blank	0.000	17:54:27
0.100 Cal Check	0.100	17:54:47
Air Blank	0.000	17:55:17
Subject Test	0.000	17:55:43
Air Blank	ABT*	17:55:50
Air Blank	IPS**	17:55:58

\*Sequence Aborted

\*\*Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000  
Location: JAIL  
Serial Number: 80-003355  
Core Version: 8105.48  
12/23/2021

17:57:19

---

Standard Lot#: 35019100A1  
Last Changed By: M. MALOY JR #281

---

QAS: M. MALOY JR #281  
LAKE HAVASU CITY PD

---

Operator: M. MALOY JR #281  
LAKE HAVASU CITY PD

---

Subject: SQAP,TEST  
DOB: 01/01/2000  
Sex: M Weight: 200

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	17:58:08
Diagnostic Test	Pass	17:58:43
Air Blank	0.000	17:59:10
0.100 Cal Check	0.100	17:59:31
Air Blank	0.000	18:00:01
Subject Test	0.000*	18:03:09
Air Blank	0.000	18:03:36
Air Blank	0.000	18:04:04
Subject Test	XXX**	18:04:22
Air Blank	RFI***	18:04:34

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

\*\*\*RFI Detect

Not a Successfully Completed Test Sequence

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. MALOY #281 AGENCY LNLCPD

DATE 12-23-2021 TIME 1805

INTOXILYZER SERIAL # BD-003355 LOCATION LNLCPD JAIL

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0.100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0.098 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Michael Maloy #281

INTOXILYZER 8000

Location: JAIL

Serial Number: 80-003355

Core Version: 8105.48

12/23/2021

18:05:24

-----  
Standard Lot#: 35019100A1

Last Changed By: M. MALOY JR #281  
-----

QAS: M. MALOY JR #281

LAKE HAVASU CITY PD  
-----

Operator: M. MALOY JR #281

LAKE HAVASU CITY PD  
-----

Test	g/210L	Time
Air Blank	0.000	18:05:54
0.100 Cal Check	0.098	18:06:15
Air Blank	0.000	18:06:44

Preventative Maintenance  
Performed -- Timer Reset