



POLICE DEPARTMENT  
**LAKE HAVASU CITY**

2360 McCULLOCH BOULEVARD NORTH  
LAKE HAVASU CITY, ARIZONA 86403-5947

To Whom It May Concern:

I hereby attest that Josh Sondrol is a Certified Intoxilyzer Quality Assurance Specialist for the Lake Havasu City Police Department.

I certify that the attached documentation of Standard Quality Assurance Procedures and/or Standard Calibration Check Procedure are full, true and correct copy of the original.

Josh Sondrol 187  
Signature

STATE OF ARIZONA        )  
  ) ss  
COUNTY OF MOHAVE    )


Subscribed and sworn to before me this 29 day of June.

2016 by JOSH SONDROL

Carla Duarte  
NOTARY PUBLIC

6-29-16  
DATE

Commission expires:

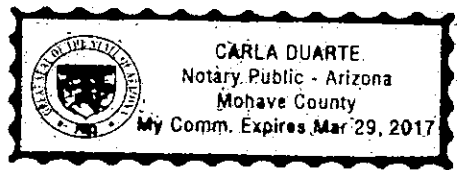

Area Code 928

Administration ..... 855-4884  
Business Office ..... 855-1171  
Investigations ..... 855-5775  
Patrol ..... 855-0515

Fax #'s  
Administration ..... 680-5430  
Business Office ..... 680-5431  
Investigations/Patrol ..... 680-5432

Emergency ..... 9-1-1  
Non-Emergency Dispatch/ ..... 855-4111  
  TDD 855-4114  
Havasus Silent Witness ..... 854-TIPS

E-mail: police@lhcaz.gov

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000  
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J SONDROL 187 AGENCY LNC PD  
DATE 6/29/16 TIME 0223  
INTOXILYZER SERIAL # 80-001029 LOCATION EAST BANK BOOKING

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 098 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE J Sondrol 187

DPS Form Exh G-2 (Rev 05-01)

INTOXILYZER 8000  
Location: EAST BANK BOOKING  
Serial Number: 80-001029  
Core Version: 8105.48  
06/29/2016 02:23:13

Standard Lot#: 22315100A1  
Last Changed By: J. SONDROL #187

OAS: J. SONDROL #187  
LAKE HAVASU CITY PD

Operator: J. SONDROL #187  
LAKE HAVASU CITY PD

Test	g/210L	Time
Air Blank	0.000	02:23:46
0.100 Cal Check	0.098	02:24:07
Air Blank	0.000	02:24:36

Preventative Maintenance  
Performed -- Timer Reset

101

EXHIBIT G-4  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000  
STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST J SONDROL 187 AGENCY LHC PD  
DATE 6/29/16 TIME 0227  
INTOXILYZER SERIAL # 80-001029 LOCATION EAST BANK BOOKING

(✓) 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC. Result 0. 098 AC.

Instrument is operating properly and accurately. YES  NO

COMMENTS

INTOXILYZER 8000  
Location: EAST BANK BOOKING  
Serial Number: 80-001029  
Core Version: 8105.46  
06/29/2016 02:27:06

Standard Lot#: 22315100A1  
Last Changed By: J. SONDROL #187

OAS: J. SONDROL #187  
LAKE HAVASU CITY PD

Operator: J. SONDROL #187  
LAKE HAVASU CITY PD

Subject: SOAP, TEST  
DOB: 01/01/1950  
Sex: M Weight: 123

15 Minute Deprivation Period? Yes

SIGNATURE J Sondrol 187

DPS Form Exh G-4 (Rev 05-01)

Test	g/210L	Time
Air Blank	0.000	02:27:52
Diagnostic Test	Pass	02:28:29
Air Blank	0.000	02:28:56
0.100 Cal Check	0.098	02:29:17
Air Blank	0.000	02:29:47
Subject Test	0.000	02:30:04
Air Blank	ABT*	02:30:11
Air Blank	IPS**	02:30:19

\*Sequence Aborted

\*\*Improper Sample

\*Deficient Sample  
\*\*Invalid Sample  
\*\*\*RFI Detect  
Begin new deprivation period

Not a Successfully  
Completed  
Test Sequence

INTOXILYZER 8000  
Location: EAST BANK BOOKING  
Serial Number: 80-001029  
Core Version: 8105.46  
06/29/2016 02:30:55  
Standard Lot#: 22315100A1  
Last Changed By: J. SONDROL #187  
OAS: J. SONDROL #187  
LAKE HAVASU CITY PD  
Operator: J. SONDROL #187  
LAKE HAVASU CITY PD  
Subject: SOAP, TEST  
DOB: 01/01/1950  
Sex: M Weight: 123  
15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	02:31:50
Diagnostic Test	Pass	02:32:27
Air Blank	0.000	02:32:54
0.100 Cal Check	0.098	02:33:15
Air Blank	0.000	02:33:45
Subject Test	0.070*	02:35:52
Air Blank	0.000	02:37:24
Air Blank	0.000	02:37:52
Subject Test	XXX**	02:38:20
Air Blank	RFI***	02:38:31

JS187

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000  
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J Sondrol 187 AGENCY LNC PD  
DATE 6/29/16 TIME 02:39  
INTOXILYZER SERIAL # 80-001029 LOCATION EAST BANK BOOKING

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 098 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE J Sondrol 187

DPS Form Exh G-2 (Rev 05-01)

JS187

INTOXILYZER 8000  
 Location: EAST BANK BOOKING  
 Serial Number: 80-001029  
 Core Version: 8105.49  
 06/29/2016 02:39:43

---

Standard Lot#: 22315100A1  
 Last Changed By: J. SONDROL #187

---

OAS: J. SONDROL #187  
 LAKE HAVASU CITY PD

---

Operator: J. SONDROL #187  
 LAKE HAVASU CITY PD

---

Test	g/210L	Time
Air Blank	0.000	02:40:11
0.100 Cal Check	0.098	02:40:32
Air Blank	0.000	02:41:02

Preventative Maintenance  
Performed --- Timer Reset